

H&L[®]

AN ISO 9001: 2008
CERTIFIED Company

1-800-HLTOOTH
www.hltooth.com

No Tool NEW! Backhoe Tooth Installation!

Use Your *Existing* 230 Adapters!
Converts your side pin shank to an
easy, top locking system!

NO More Flexpin[®] Hassle!

© H&L Tooth Company 2015



TRY IT!

YOU'LL NEVER GO
BACK TO FLEXPINS!

STARTER KIT!

#KIT233SP

Box Contains:

5 - 233SPs

Sharp Penetration Teeth

3.7#

5 - 233CLPs

Reusable Alloy Klips

5 - 233CERTs

Reusable Inserts



NO SPECIAL
TOOLS REQUIRED

Work Safely! As always, safety glasses and gloves are recommended.
137.2011b

United States and Foreign Patents



233 Series Installation

INSTALLATION INSTRUCTIONS

1 Slide the 233CERT into the adapter nose hole. (CERT is reversible)



2 Slide Tooth UP adapter & OVER until LUG is in the shank hole.



3 Install the Klip from the top, down through the GAP in the tooth.



4 Seat the Klip **flush** with the top of the tooth.



NO SPECIAL TOOLS REQUIRED

Wear OSHA approved safety equipment including eye protection during G.E.T. maintenance.

© H&L Tooth Company 2015

NO TOOLS REQUIRED FOR INSTALLATION


233 Series Removal

REMOVAL INSTRUCTIONS


1 Remove dirt from connection.



2 Twist standard Pry bar under Klip head.

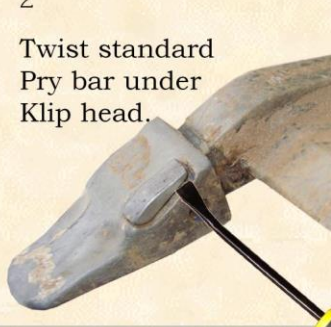

3 Rotate the Pry bar to the rear of the Klip and lift forward.

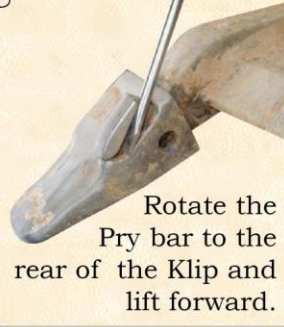


Remove dirt

Clean Adapter

ALTERNATE KLIP REMOVAL PROCESS:

Curl bucket to expose hole on bottom of tooth. With a 1/4" diameter punch, insert and force the Klip upward.

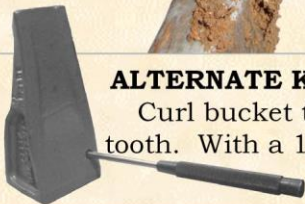

Wear OSHA approved safety equipment including eye protection during G.E.T. maintenance.

Work Safely! As always, safety glasses and gloves are recommended.

1-800-HLTOOTH

www.hltooth.com

142.2011

United States and Foreign Patents

