

H&L[®]

AN ISO 9001:2008
CERTIFIED Company

1-800-HLTOOTH
www.hltooth.com

No Tool **NEW! Backhoe Tooth Installation!**

Use Your Existing 230 Adapters!
Converts your side pin shank to an easy, top locking system!
NO More Flexpin[®] Hassle!



KIT COST



TRY IT!

YOU'LL NEVER GO
BACK TO FLEXPINS!

STARTER KIT! #KIT233TT7

Box Contains:

5 - 233TT7s

Twin Tiger Teeth

5 - 233CLPs

Reusable Alloy Clips

5 - 233CERTs

Reusable Inserts



**NO SPECIAL
TOOLS REQUIRED**

© H&L Tooth Company 2015

Work Safely! As always, safety glasses and gloves are recommended.
143.2011a

United States and Foreign Patents



233 Series Installation

INSTALLATION INSTRUCTIONS

1 Slide the 233CERT into the adapter nose hole. (CERT is reversible)



2 Slide Tooth UP adapter & OVER until LUG is in the shank hole.



3 Install the Klip from the top, down through the GAP in the tooth.



4 Seat the Klip **flush** with the top of the tooth.



NO SPECIAL TOOLS REQUIRED

Wear OSHA approved safety equipment including eye protection during G.E.T. maintenance.

NO TOOLS REQUIRED FOR INSTALLATION


233 Series Removal

REMOVAL INSTRUCTIONS


1 Remove dirt from connection.



2 Twist standard Pry bar under Klip head.

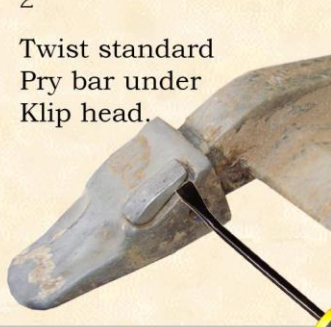


3 Rotate the Pry bar to the rear of the Klip and lift forward.

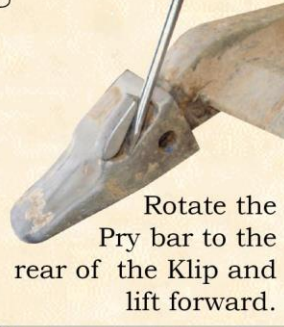

ALTERNATE KLIP REMOVAL PROCESS:

Curl bucket to expose hole on bottom of tooth. With a 1/4" diameter punch, insert and force the Klip upward.

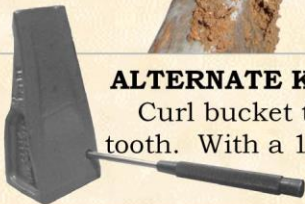

Wear OSHA approved safety equipment including eye protection during G.E.T. maintenance.

Work Safely! As always, safety glasses and gloves are recommended.

1-800-HLTOOTH

143.2011

© H&L Tooth Company 2015

www.hltooth.com

United States and Foreign Patents

